



Technical efficiency



sharing our passion

Washglanz

Highly concentrated rinsing additive

- Accelerates the drying of the crockery
- Sparkling glassware and cutlery, stain-free, as of the first machine run
- Anti-foam surface-active agents improving the dishwasher's efficiency
- Specifically suitable for washing tunnels
- Without coloring, fragrance-free
- Non allergenic



Product-information:





Washglanz

Highly concentrated rinsing additive

DESCRIPTION

For sparkling cutlery and glassware, trace-free: effective results in a single machine run. Fewer breakages and reduced labour costs by the elimination of manual wiping. Fast drying action: the fast streaming action of the water enables the crockery to dry more quickly by accelerating the evaporation. The crockery can be stacked earlier and stored out of the washroom: saving time and space, fast re-use, more rotation, less stock necessary.

Food contact approved.

USE

- Sort the crockery and remove the scraps. Put the crockery into the machine. The product is automatically dosed in the machine by the dosing system.
- Replacing an empty can: Turn off the crockery dishwasher. Turn off the Pollet doser if necessary. Wear safety goggles and gloves. Remove the product aspiration pipe from the empty can, with prudence. Introduce the aspiration pipe into the new can. Turn on the doser and the dishwasher. Restart the Pollet doser pump, if necessary.

Safe for stainless steel surfaces (when used as recommended).

DOSAGE

- Concentration between 0,2 and 0,3 gr per liter of warm water.

TECHNICAL CHARACTERISTICS

- Color: colorless
- Pure pH: 2,25 ± 0,25

STORAGE

Keep the product in its original closed packaging.

ECOLOGICAL INFORMATION

- Biodegradable product (CE 648/2004)
- Packaging 100% recyclable

PACKAGING



Packaging	Reference	EAN code
10-liter can	4512023	5411283452205